



SB Connectivity acadon

This manual is for connecting the archival software acadon_doc.box by acadon AG.

Written By: Rene Weber



INTRODUCTION

This manual is for connecting the archival software acadon_doc.box by acadon AG.

This guide is tested with the Silent Brick WORM Archive Version 2.11

Step 1 — General Information

⚠ Requirements Compliance Option is necessary to enable various WORM volume types.

i Installation and Connectors Installation and electrical connection as well as network connection are to be done as described in the manual Installation


i Network Adjustments The network settings are to be adjusted as described in the manual Installation

Step 2 — Volume Settings

The image displays two screenshots of the 'Volume Settings' dialog box. The left screenshot shows the 'Safe files' tab. The 'Volume type' is set to 'WORM with retention (RWRO triggered)'. The retention period is configured as 1 Year, 0 Days, 0 Hours, and 0 Minutes. The 'File extension' is set to 'safe' and the 'File format' is set to 'xml'. The right screenshot shows the 'Miscellaneous' tab. The 'Do not archive 0-byte files' checkbox is checked. The 'Prevent renaming of empty directories' and 'Prevent renaming of files' checkboxes are also checked.

- Create an archive including WORM and Stage Brick
- Create a sub-volume of type WORM with Retention (RWRO triggered).
- The retention period in years and days must be adopted to the value necessary for the data content being archived
- Select the option 'Prevent renaming of files' and 'renaming of empty directories'
- Select the option 'Do not archive 0-byte files'

Step 3 — Share Settings

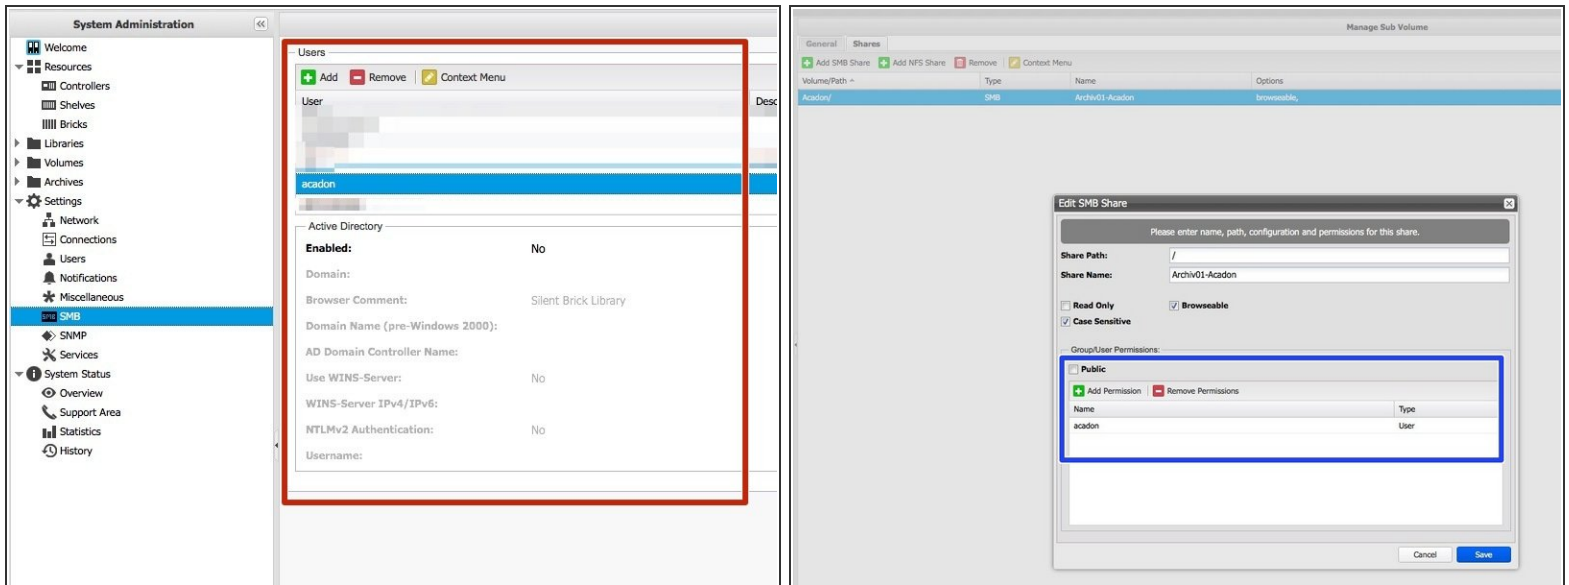

- Create the acadon service user under SMB or join the machine to the active directory
- Add an SMB share to the create volume with access rights for the acadon service user

Step 4 — Connect acadon

- Please get in touch with acadon for setting up the connection with acadon_doc.box